

n s t r u c t i o n

 
 
Smart audio glasses

Product parameters


| | | | | | |
|-----------------------|---|--------------------|---------------|------------------|-----------|
| Frame color | blank | Pairing name | Audio eyewear | Frame material | resin |
| Transmission distance | 10m | Bluetooth protocol | Bluetooth 5.0 | Battery capacity | 110mAh |
| Charging time | 1-2 hours | Usage time | 5hours | Standby time | 200 hours |
| Packing list | Glasses, charging cable, glasses box, manual, warranty card | | | | |

Compatible with Bluetooth devices such as mainstream brand mobile phones and panel computers.
Left and right double speakers, directional playback, true stereo sound.

Button description

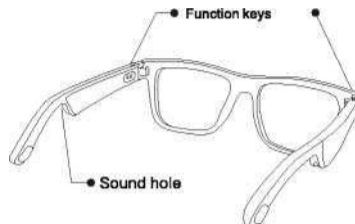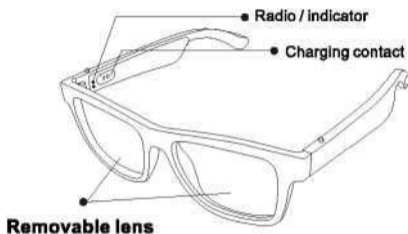


Charging/OFF/ON

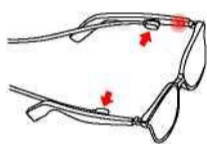 

Use the magnetic suction charger attached to the charging contact

 Charging status : The Indicator light stays red, Full charge shows blue
Low power : This Indicator light shows red light every 2 seconds and

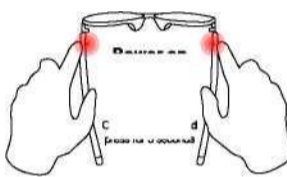

Power ON : Long press the left and right function keys for 4 seconds, the blue light will turn on once, until you hear the sound of the speaker: (Power on) means that the eyewear is turned on.

Power OFF : In the state of play, pause, call, etc., choose the left/right function keys to press and hold for 3 seconds, the red light will be on for 3 times, until you hear the sound of speaker: (Power of f) means that the eyewear is turned off through Bluetooth.

Power on
Press both sides for 4 seconds
Power OFF
Choose any side and press fix 3 seconds

Bluetooth pairing



1. Turn on the eye wear and turn on the Bluetooth of the mobile phone, search for the device name Audio eyewear and connect.
2. The eyewear and the phone are paired successfully. Prompt tone: connected
3. The eyewear are disconnected from the phone. Prompt tone: Disconnected

• Red and blue LED lights flash alternately and quickly waiting for Bluetooth pairing. When paired successfully, the blue LED light flashes once every 5 seconds.

language switch :

When Bluetooth is OFF, click left/right leg function keys 8 times to switch between Chinese and English.

Play music status

1. Short press the left temple button or the right temple button (short press for 1 second) to play/pause music.
2. Double-click the left temple button to increase the volume by one level. Double-click the left temple button again to increase the volume by two levels. Double-click the left temple button again to increase the volume by three levels. Double-click the left temple button again to increase the volume by four levels. Double-click the left temple button again to increase the volume by five levels to reach the highest level. The speaker makes a "lll di" sound. The volume increase is divided into 5 levels. The default is level 3.
3. Double-click the right temple button to decrease the volume by one level. Double-click the right temple button to decrease the volume by two levels. Then double-click the right temple button to reduce the volume by three levels. Double-click the right temple button again to reduce the volume by four levels.

Voice state

When it is standby or you are listening to music, long press the left/right temple button for 2 seconds (the speaker will prompt a "ll di" sound during the process and press for 1 second) to activate the Sir voice assistant. When activated, short press again to turn off the Sir voice assistant. There will be a prompt sound on the mobile phone. The phone will also pop up a voice interface.

Call state

1. When eyewear's Bluetooth is connected with phone, short press the left/right temple to answer/hang up the incoming call.
2. When eyewear's Bluetooth is connected with phone, long press the left/right temple button to reject the incoming call.
3. Adjust the volume during a call: double-click the left temple to decrease the volume. Double-click the right temple to increase the volume (do not support volume adjustment for the third party call).
4. In the call state, short press the left/right temple button once to connect the second call/switch to three-way calling.
5. In the call state, long press the left/right temple button once to hang up the current call and answer the second call.

Sleep state/power state

1. When the glasses are in the search state after being turned on, they will automatically shut down after 3 minutes if the bluetooth of the mobile phone is not found.
2. When the glasses are in a suspended state, the blue light is always on. After 3 minutes, the blue light is off and the glasses are in a deep sleep state.
3. When the battery capacity is less than 5% of the total battery capacity, the system will release the prompt tone "Please charge the eyewear".
4. When the battery capacity is less than 15% of the total battery capacity, the red light will flash to indicate that the battery is low.

Using a state



Using a state



• Please fully charge the product for first use. • If the product is not charged for a long time (more than two weeks), please charge it before use.

- Do not wipe the dirty lenses directly. The lenses should be moistened first, and then dried with lens cloth. Try to use a suede and strong absorbent glasses cloth to wipe it clean, do not wipe with too much force, wipe in the same direction, do not wipe back and forth, and do not rotate around the lens.
- Do not dismantle or repair or remodel this product for any reason, otherwise it may cause fire, electronic breakdown or even complete damage to this product.
- Do not place the device in an environment that is too hot or too cold (below 0°C or above 45°C).
- Do not soak the product in liquid.
- The eyewear cannot be exposed to the sun for a long time, otherwise they will be easily deformed, aged and broken.
- Do not put the magnetic suction of the charging cable close to metal objects to prevent the danger of short circuit caused by the magnetic suction of metal objects.
- If the charging is complete, please disconnect the charger from the device, unplug the charger, and do not charge more than 12 hours continuously.
- Please do not throw the old battery in the domestic garbage for disposal. Improper battery disposal may cause the battery to catch fire or explode, please follow local regulations when disposing of this product, battery and other accessories.

To avoid hearing damage, do not use high volume for a long time

CE & RoHS