




Sensocon, Inc.
P.O. Box 518 • Highland City, FL 33846
Phone: (863) 248-2800 • Fax: (863) 248-2798
www.sensocon.com

SENSOCON, Inc. JFM-P INSTALLATION:

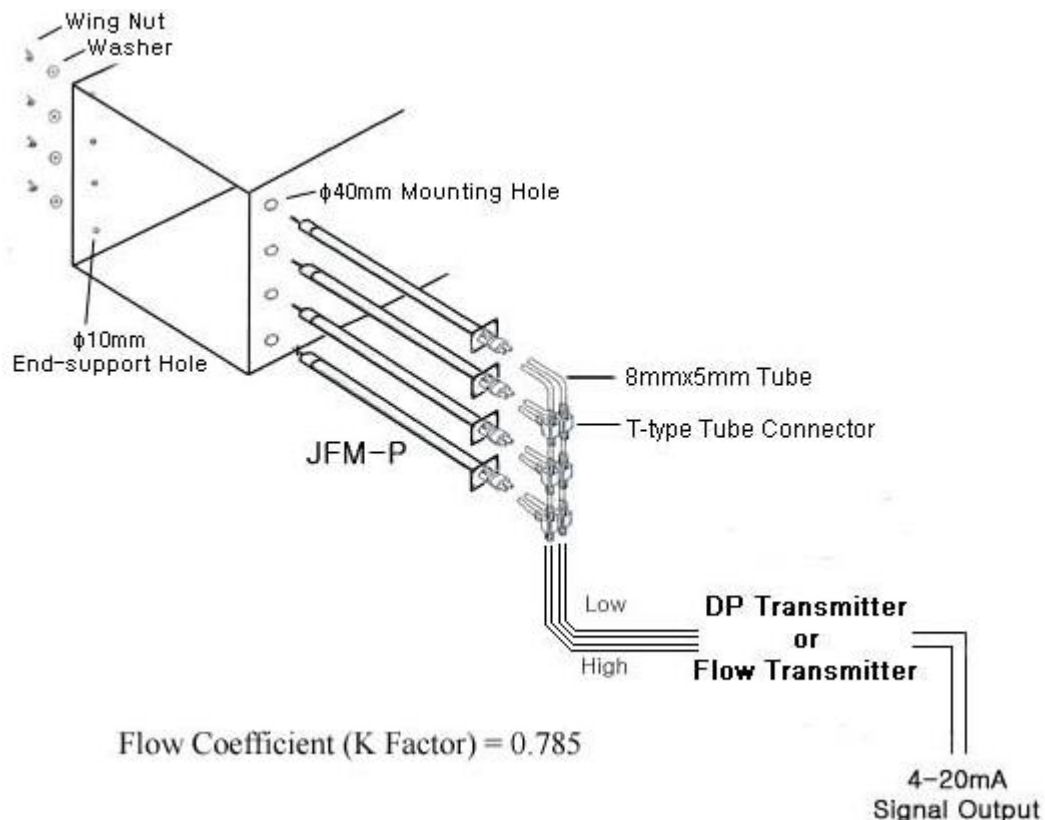

SENSOCON, Inc. JFM-P MAINTENANCE:

In most HVAC environments, periodic maintenance and calibration is neither required nor recommended.



Sensocon, Inc.
P.O. Box 518 • Highland City, FL 33846
Phone: (863) 248-2800 • Fax: (863) 248-2798
www.sensocon.com

JFM-P Probe Installation-notes

Below are the formulas for calculating proper installation dimensions for the JFM probes:

$$X = (\text{Duct Width}) / (\# \text{ of Probes})$$

$$\text{Dimensions between duct wall and probe} = X/2$$

$$\text{Dimension between probes} = X$$

Example: 20" x 20"

