
## ROTARY DAMPERS

# D56 SERIES



#### **FEATURES**

- · RoHS compliance
- · TD56 DAMPERS have a device which reduces back-lash and continues to exhibit a positive damping effect.
- · TD56 DAMPER permits 2.94N+m of maximum torque.

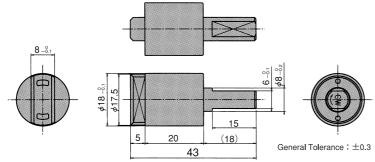

## TD56A1 Operation angle (Open position) (OPERATION ANGLE) OPEN POSITION OW TORQUE RANGE 70 CLOSED POSITION


Above drawing shows operation angle of TD56A1 series dampers. Operation angle for TD56B1 series dampers is symmetrical to the vertical line. Shaft position at the time of shipment is closed

Code	Part No.	Allowable Torque [N·m] (Kgf·cm)	Direction
605608	3 TD56A1-15K	[1.47] (15)	CW(R)
605606	5 TD56A1-20K	[1.96] (20)	CW(R)
605604	4 TD56A1-25K	[2.45] (25)	CW(R)
605600	D TD56A1-30K	[2.94] (30)	CW(R)

Code	Part No.	Allowable Torque [N·m] (Kgf·cm)	Direction
605609	TD56B1-15K	[1.47] (15)	CCW(L)
605607	TD56B1-20K	[1.96] (20)	CCW(L)
605605	TD56B1-25K	[2.45] (25)	CCW(L)
605601	TD56B1-30K	[2.94] (30)	CCW(L)

#### **DURABILITY**

Each damper is set-up with an applied torque and weight on the shaft of the testing device. Measurements for closing time are taken under above condition.

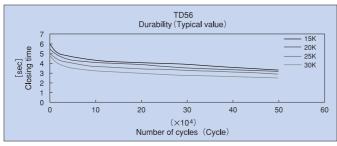


Operation angle	110°		
Durability	50,000cycles		
	Applied torque	Initial value	
	1.47N·m (15kgf·cm)	3~10 (sec)	
Closing time	1.96N·m (20kgf·cm)	3~10 (sec)	
	2.45N·m (25kgf·cm)	3~10 (sec)	
	2.94N·m (30kgf·cm)	3~10 (sec)	

## (40°) (70°)W (O°)

### TEMPERATURE CHARACTERISTICS

After the damper is stabilized at room temperature for 1 hour or more, the closing time is measured using a TOK made device.

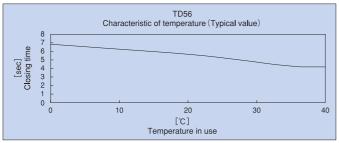

#### **TEST CONDITION**

①Setting-up time: 15sec/cycle

②Applied torque

1.47N·m(15kgf·cm) 1.96N·m (20kgf·cm) 2.45N·m (25kgf·cm) 2.94N·m (30kgf·cm)

③Temp: 23°C±2°C
④Angle for measuring the closing time: 70°→0°

(110°)

**⑤**Radial force : nothing

©Closing time after durability test: 1 sec or more

#### TOK BEARING CO.,LTD.

HEAD OFFICE, TOKYO, JAPAN - TEL: 81-3-3969-1534 FAX: 81-3-3969-9354 EMAIL: overseas@tok-bearing.co.jp

Product specification are subject to change without prior notice.

Before assembly or use of any bearing, please read "Caution for Use"